Always there to help you

Register your product and get support at
www.philips.com/welcome

Question? Contact Philips

AEA1000

User manual

PHILIPS

Contents

1 Important 2
Important safety information 2
Notice 3

2 Your InRange device 4
Introduction 4
What's in the box 4
Your InRange device 4

3 Prepare 5
Prepare your iPhone 4S/iPhone 5 or New iPad 5
Prepare the InRange device 5
Set up Bluetooth connection 6

4 Use 9
Locate your iPhone 4S/iPhone 5/New iPad or InRange device 9
Alert you when your iPhone 4S/iPhone 5/New iPad and InRange device are out of range 10
Set safe range free of alerts 10

5 Product information 11

6 Troubleshooting 12

English

1 Important

Important safety information

The translation of this document is for reference only.

In the event of any inconsistency between the English version and the translated version, the English version takes precedence.

Caution

- RISK OF EXPLOSION IF THE BATTERY IS REPLACED BY AN INCORRECT TYPE.
- DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- To avoid damage or malfunction:
- Do not expose the device to excessive heat caused by heating equipment or direct sunlight.
- Do not drop the device or allow objects to fall on the device.
- Do not allow the device to be submerged in water. Do not expose the battery compartment to water, as water entering the device may cause major damage.
- Active mobile phones in the vicinity may cause interference.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the device.

- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as objects have fallen into the device or the device does not operate normally.
- The device shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. lighted candles).
- The small parts of this device can potentially be swallowed by babies or small children. Keep these parts out of reach of children.

About operating and storage temperatures

- Operate in a place where temperature is always between 0 and 35°C (32 to 95°F)
- Store in a place where temperature is always between -20 and 45°C (-4 to 113°F).
- Battery life may be shortened in low temperature conditions.

About replacement of parts/ accessories

Visit www.philips.com/support to order replacement parts/accessories.

Risk of swallowing batteries!

- The device may contain a coin/button type battery, which can potentially be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Make sure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Notice

CE 1588

This product complies with the radio interference requirements of the European Community.

This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www.philips.com/support.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Philips is under license.

Disclaimer

Philips is not responsible for any loss of valuables.

2 Your InRange device

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

This InRange device offers you a loss prevention solution that allows you to:

- locate your iPhone 4S/iPhone 5/New iPad from the InRange device.
- attach the InRange device to your valuables and locate them from your iPhone 4S/iPhone 5/New iPad.
- alert you from the InRange device when your iPhone 4S/iPhone 5/New iPad is beyond the set range.
- alert you from your iPhone 4S/iPhone 5/New iPad when your valuables attached to the InRange device are beyond the set range.

What's in the box

Check and identify the contents of your package:

- InRange device
- Protective pouch
- Metal lock
- Cell battery (CR2016) (for replacement)
- Battery eject tool
- Lanyard
- Quick start guide
- Safety sheet

Your InRange device

This InRange device is compatible with the following iPhone and iPad models:

- The New iPad
- iPhone 5
- iPhone 4S

3 Prepare

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Prepare your iPhone 4S/ iPhone 5 or New iPad

1 Enable Bluetooth on your iPhone 4S/ iPhone 5/New iPad.

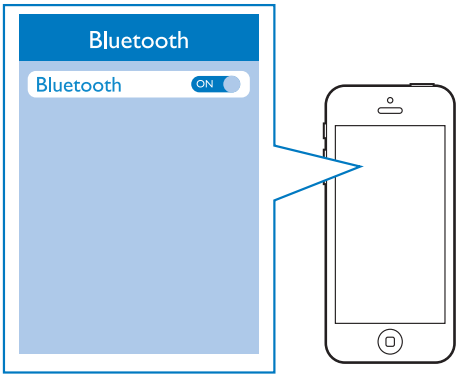

2 Download and install **Philips InRange** from Apple App Store.

Prepare the InRange device

For first-time use:

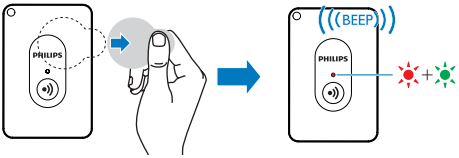

- Remove the plastic tab from the battery compartment.
  - ↳ The InRange device switches on automatically.
  - ↳ The power indicator flashes red and green alternately, and the InRange device beeps.

Tip

- To switch off the InRange device, press and hold for more than 3 seconds until the power indicator turns off and the InRange device beeps. To switch on it again, press and hold until the power indicator flashes red and green and the InRange device beeps.

To replace the battery:

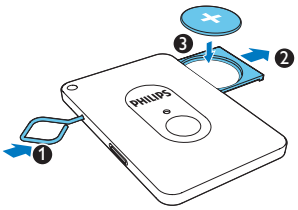

1 Use the supplied metal pin to eject the battery compartment.

2 Load a CR2016 cell battery with the correct polarity as indicated.

3 Push to close the battery compartment.

Set up Bluetooth connection

Note

- Before setup, make sure that you have enabled Bluetooth on your iPhone 4S/iPhone 5/New iPad, and the power indicator on the InRange device flashes red and green alternately.

1 Put the InRange device into the protective pouch, then use the supplied metal lock to secure the pouch.

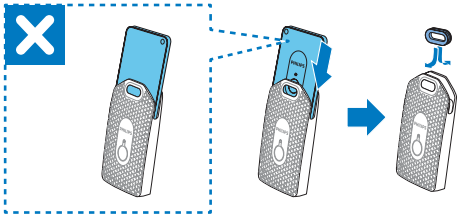

2 Attach the InRange device to your valuables (objects), such as a key or bag.

3 Run **Philips InRange** on your iPhone 4S/ iPhone 5/New iPad.

4 Tap **Get Started**.

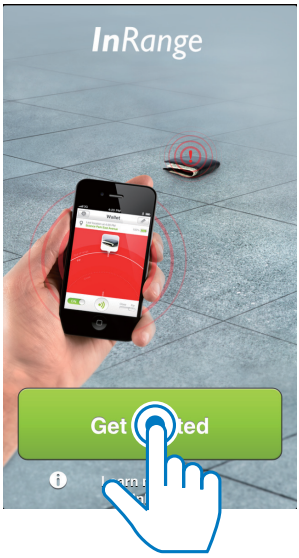

5 As instructed, make sure that you have enabled Bluetooth on your iPhone 4S/ iPhone 5/New iPad, then tap **Next**.

6 As instructed, make sure that you have switched on the InRange device, then tap **Next**.

↳ The iPhone 4S/iPhone 5/New iPad starts to scan and search for the available InRange device.

↳ After the InRange device is found, 'Philips AEA1000' appears on the app screen.

7 Tap 'Philips AEA1000', then tap **Pair** on the pop-up message.

↳ Your iPhone 4S/iPhone 5/New iPad starts to pair and connect with the InRange device.

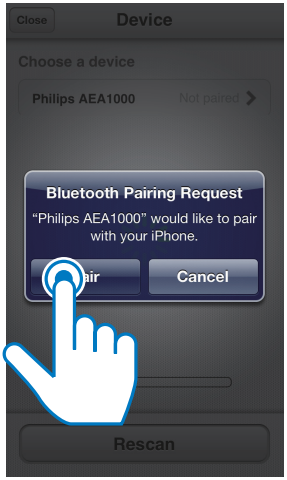

8 After successful connection, tap the image/name of the object attached to the InRange device.

- If you cannot find a matching image/name, tap **Other**, then follow the on-screen instructions to take a picture and name your object.

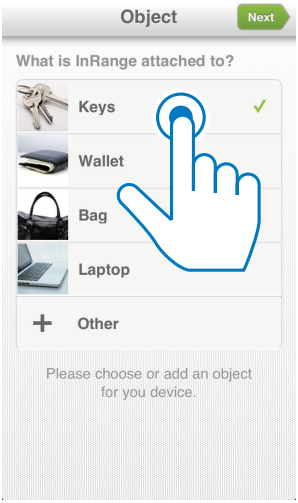

9 Select a safe distance for the object to be protected, then tap **Done** to finish setup.

Range
Done
What is the safe distance?
Close
Approx. 1 to 10 meters / 3 to 33 f
Far
Approx. 10 to 20 meters / 33 to 66 feet
The alarm will ring when your phone and the object have been separated beyond the selected safe distance. The accuracy of safe distance may vary according to the surrounding environment.
Sensitivity Adjustment
More
Less
Keys
Your device has been setup, tap here to edit
If you want to setup another device, go to settings.
If you want to test the connection, tap here.
Out of range
Far
Close
ON
Close
Far

4 Use

Locate your iPhone 4S/iPhone 5/New iPad or InRange device

You can locate your iPhone 4S/iPhone 5/New iPad or InRange device simply with one touch.

To locate your iPhone 4S/iPhone 5/New iPad:

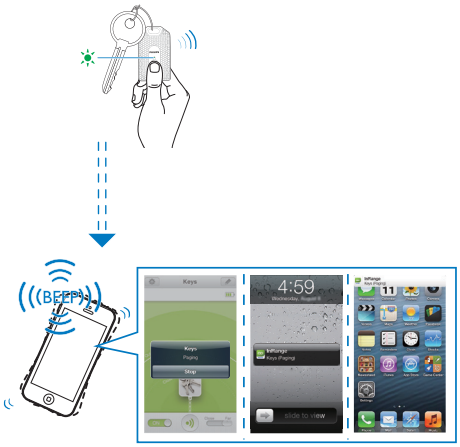

1 Press •)) on the InRange device.
↳ Both the InRange device and your iPhone 4S/iPhone 5/New iPad beep.

2 Follow the beeps to find your iPhone 4S/iPhone 5/New iPad.

3 Press •)) on the InRange device again or tap **Stop** on the popup menu of your iPhone 4S/iPhone 5/New iPad to stop beep.

To locate your valuables attached to the InRange device:

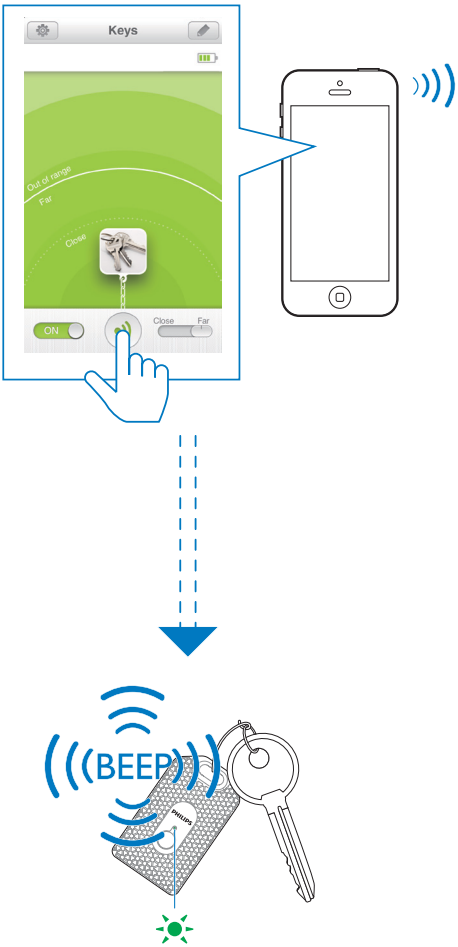

1 Run Philips InRange on your iPhone 4S/iPhone 5/New iPad, then tap •)) on the app screen.
↳ Both the InRange device and your iPhone 4S/iPhone 5/New iPad beep.

2 Follow the beeps to find the InRange device.

3 Press •)) on the InRange device or tap •)) on the app screen of your iPhone 4S/iPhone 5/New iPad again to stop beep.

English

Alert you when your iPhone 4S/iPhone 5/New iPad and InRange device are out of range

To prevent loss of your iPhone 4S/iPhone 5/New iPad or your valuables attached to the InRange device, you can hear beeps when the InRange device and your iPhone 4S/iPhone 5/New iPad are out of the set range.

To stop the beeps:

- Follow the beeps and walk around until your iPhone 4S/iPhone 5/New iPad and the InRange device return to the set range.

Set safe range free of alerts

You can use the safe range settings to prevent your iPhone 4S/iPhone 5/New iPad or InRange device from ringing within a certain range.

1 Run **Philips InRange** on your iPhone 4S/iPhone 5/New iPad, then tap ✎.

2 Tap **Safe Range** -> **Add Safe Range**.

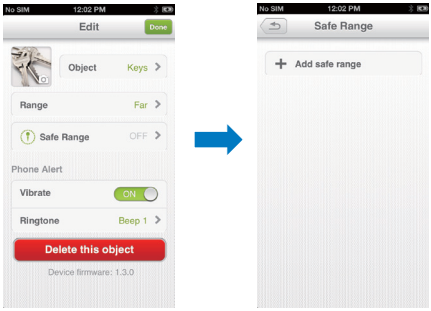

3 Select a place on the map as your safe range, then tap **Done** to finish the setting.

5 Product information

Bluetooth version	Bluetooth® smart
Battery	CR2016
Battery life	3 months
Product dimension	59.9x39.9x3.8mm 78.0x44.0x7.9mm (with pouch)
Weight	10.8g

6 Troubleshooting

Warning

- Risk of electric shock. Never remove the casing of the device.

To keep the warranty valid, never try to repair the device yourself.

If you have problems using this device, check the following points before you request service. If you still have a problem, register your device and get support at www.philips.com/support.

Failed to set up Bluetooth connection between my iPhone 4S/iPhone 5/New iPad and InRange device.

- Tap **Rescan** on the app screen of Philips InRange to try again.
- Check whether the InRange device is switched on and the power indicator flashes red and green. Press and hold on the InRange device for more than 3 seconds to switch on the device.
- Check whether you have enabled Bluetooth on your iPhone 4S/iPhone 5/ New iPad.

Why is that there is no beep when my iPhone 4S/iPhone 5/New iPad and InRange device are out of range?

- Check whether you have set the safe range.
- Check whether you have switched off the InRange device.
- Check whether the battery in the InRange deice is drained. Replace the battery.

Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

AEA1000_00_UM_V3.0